RCC Analysis Tool Installation SOP

Step1→Step6

2018.04.09 Version 1.0

Step1_UnZip RCC.zip

解壓縮RCC.zip

檔案(F)	編輯(E)	檢視(V)	我的最愛	≹(A) ⊐	〔具(T)	說明(H)	
	्र संबद्धाः अस्य २		→ 1 段融		這多知		
	中國公開日 //	則武 夜彩	\$ 1岁到J 		月前(•
]L bin							
license	e tfiles						
nidist.i	id						
setup.e	exe						
setup.1	m						
•							►
已選取1	個物件	1 456 128	1 456 1	28 2	015-05-2	9 13:33	

Step2_Installation

解壓縮RCC.zip檔案至電腦硬碟並執行setup.exe



Step3_Set Path

選擇安裝至電腦的路徑,預設C:\RCC

the second secon	
Destination Directory Select the primary installation directory.	
All software will be installed in the following locations. To install software into a different location, click the Browse button and select another directory.	
Directory for RCC C:\RCC\ Browse	
Directory for National Instruments products C:\Program Files (x86)\National Instruments\ Browse	
<< Back Next >>	Cancel

Step4_Process

點選Next,準備安裝,不同電腦安裝時間不同(數秒到數分鐘不等),安裝完成點選Finish即可。

🐙 RCC		NCC	
Start Installation Review the following summary before continuing.		Installation Complete	
Adding or Changing • RCC Files		The installer has finished updating your system.	
Click the Next button to begin installation. Click the Back button to change the installation settin	gs.		
Save File << Back Next >>	Cancel	<< <u>B</u> ack	<u>N</u> ext >> <u>Einish</u>

Step5_Finish

安裝完成後,桌面會自動建立捷徑,開始程式集亦會有建立程式選單。



Step6_Operate

1.選取需要分析的檔案(點選資料夾圖案) 2.點選左上角箭頭圖案執行分析程式(或使用快捷鍵 Ctrl+R)

Data Anal	ysis.vi																				<u> </u>
File Edit	Operate	Tools	Window	Help																	
檔案路徑]				t ee	4 T K		n-t	- ,	L L	кz.	і. н		
⁸ C:\Users'	\john_hsu\\	Desktop\R	RCC\17_38.	dls							L.	于间]俗	J.	時	F:大	广花	ダ(^_	い要	↓點 トー1⊻)	
Data Histo	rv							- C										_			
Time	17:38:25.9	17:38:28.7	7 17:38:32.9	17:38:35.1	17:38:37.7	17:38:41.5	17:38:44.0	17:38:45.5	17:38:47.2	17:38:50.5	17:38:56.4	17:38:58.0	17:38:58.4	17:38:59.0	17:38:59.4	17:38:59.	17:39:00.5	17:39:00.9	17:39:01.5		
LS-4	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	OI	On	On		
LS-5	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-6	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-7	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-8	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-9	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-10	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-11	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-12	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-13	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-14	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
111直 左	- Ч	н -	<u></u> н	щ щ	щ щ	н н	нч 	H	н н	- Ч	H H	н н	- Ч	н +	щ щ	н -	н +	н н	н н		
レヨーロ	単	甲鎖往	単道往	甲銷往	甲甾往	甲鎖往	甲甾仁	甲銷往	単道往	単鎖往	単鎖社	甲省往	単鎖往	単鎖社	単	甲銷住	単鎖往	甲甾仁	単端往		
右敏重	- 新正 	- 新正 		新止 		新住	- 新山 		- 新仁 	新止 		- 新正 	新止 		- 新正 	新止 	新止 	新正 	- 新山 		
左手敏重		鎖住	鎖住	鎖住	鎖住	鎖住		鎖住	鎖住		鎖住	鎖住		鎖住	鎖住	鎖住	鎖住	鎖住			
右手煞車	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住		
左高度	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222		
右高度	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333		
左重量	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444		
右重量	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555		
-	1			1	1	1			i			i		i			i				

▶ [

Exit

1.可拉動捲軸觀看不同時間的數據。 2.點選右上角箭頭圖案關閉程式(或使用快捷鍵 Ctrl+Q)

📴 Data An	ilysis.vi																		
File Edit	Operate	Tools V	Vindow	Help															
\$ B																			
檔案路徑																			
BC:\User	s\john_hsu\	Desktop\R(LC\17_38.0	dis															
Data His	tory	1 T 00 00 T		100000		10000	1000	10000	1000	10.00 50 5	10.00 56 4	10.00 50.0	10000	100000	10000	10.00 50.0	4 17 00 00 1		
Time	17:38:25.9	17:38:28.7	17:38:32.9	17:38:35.1	17:38:37.7	17:38:41.5	17:38:44.0	17:38:45.5	17:38:47.2	17:38:50.5	17:38:56.4	17:38:58.0	17:38:58.4	17:38:59.0	017:38:59.4	17:38:59.9	17:39:00.5	17:39:00.9	917:39:01.5
LS-4	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On
LS-5	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On
107	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On
LS-7	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On
100	01	On	On	On	On	On	On	On	On	On	On	On	On	On	On	01	On	On	On
1 5-9	01	On	On	On	On	On	On	On	On	On	On	On	On	On	On	01	On	On	On
LS-10	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On
LS-12	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On
LS-13	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On
LS-14	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On
位置ち	申	中	中	中	中	中	中	中	中	中	中	中	中	中	中	申	中	中	申
位置右	中	中	中	中	中	中	中	中	中	中	中	中	中	中	中	中	中	中	中
左煞車	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住
右煞車	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住
左手煞車	1 鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住
右手煞車	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住
左高度	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222
右高度	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333
左重量	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444
右重量	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555
<	_																		•

Export

於資料數據任一位置點下滑鼠右鍵,出現右鍵選單,取消Show Selection功能

📴 I	ata Analy	vsis.vi																				
File	Edit (Operate	Tools V	Vindow	Help																	
	♦ ₹)																				
																						<u> </u>
,	的变化之间																					
9	C:\Users\	iohn_hsu\l	Desktop\R(CC\17_38.0	dls																	
]	Data Histor	У																				
	Time	17:38:25.9	17:38:28.7	17:38:32.9	17:38:35.1	17:38:37.7	17:38:41.5	17:38:44.0	17:38:45.5	17:38:47.2	17:38:50.5	17:38:56.4	17:38:58.0	17:38:58.4	17:38:59.0	17:38:59.4	17:38:59.9	17:39:00.5	17:39:00.9	17:39:01.5		
	LS-4	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
	LS-5	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
	LS-6	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
	LS-7	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
	LS-8	On	On	On	On	On	On	On	On	On	<u> </u>	On	<u> </u>	٦n	On	On	On	On	On	On		
	LS-9	On	On	On	On	On	1 _ n	On	Jn	On					On	On	On	On	On	On		
	LS-10	On	On	On	On	<u></u>		0:	<u>h</u>	On			(1		On	On	On	On	On	On		
	LS-11	On	On	On	On	0	UII.	On	מי	n		L.C.	\leq	≤ 0	On	On	On	On	On	On		
	LS-12	On	On	On	On	0		C	on	On	-Op		(1)	12	On	On	On	On	On	On		
	LS-13	On	On	On	- On	0	Un	On	On	On	on	On	ú.		• On	On	On	- On	Un	On		
	しい 14 (2) (2) (2) (2) (2) (2) (2) (2) (2) (2)	- Un	- Un	- On	- On	- Un	- Un	- Un	- On	- On	- On	- Un	- Un	- Un	Un	- Un	Un H	- On	- Un	Un		
	位置工作				++ ++	- 	#			++ ++			- H	- HP		++ ++	++ -++	++ ++	н н			
	レヨーロ	単領住	単催住	単催住	単		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	単領住	単循位	単位	一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		+	単	単緒住	単領住	単	単	- 平		
	右敏甫	調正	調圧	調任	鎖住	K i -	* <u></u>	領任		調住	調け	* 住	野白山		- 頭圧 	領住	領住	消亡		鎖住		
	54.84 左手繁重	鎖住	鎖住	鎖住	鎖住	44	* *	領住	領住	領住		道住			領住	領住	領住	領住				
	右手煞車	鎖住	鎖住	鎖住	鎖住	鎖		鎖住	鎖住	鎖住	<u>ئارىم</u>		17.24	NP 12	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住		
	左高度	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222		
	右高度	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333		
	左重量	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	Cop	y Data	
	右重量	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	Des	cription and Tip	
	4							۲ Г												Emp	pty Table	
	_	_																		Inse	ert Row Before	
																				Inse	ert Column Before	
																				Del	ete Row	
																				Del	ete Column	
																				✓ Sho	w Selection	
																				Exp	ort 🕨	

Export

1.於資料數據任一位置點下滑鼠右鍵,出現右鍵選單,選取Export功能 2.可選擇"複製"功能或者直接"輸出Excel檔案"或者直接"輸出圖檔"。

	-																				
素路徑	· 1 1 17		0017.00	11																	
C:\Users\	jonn_nsu\i	Desktop\k	.00\17_38.	ais																	
lata Histor	ru.																				
Time	., 17:38:25.9	17:38:28.7	17:38:32.9	17:38:35.1	17:38:37.7	17:38:41.5	17:38:44.0	17:38:45.5	17:38:47.2	17:38:50.5	17:38:56.4	17:38:58.0	17:38:58.4	17:38:59.0	17:38:59.4	17:38:59.9	17:39:00.5	17:39:00.9	17:39:01.5		
LS-4	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-5	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-6	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-7	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-8	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
LS-9	On	On	On	On	On		nر ک	٦n	On		On	On	n	On	On	On	On	On	On		
LS-10	On	On	On	On	Jn	m	_h K	On	On		On	r	<u>с.</u>	On	On	On	On	On	On		
LS-11	On	On	On	On	on	î	Or		On	<u> </u>	On	25		On	On	On	On	On	On		
LS-12	On	On	On	On		<u> </u>	<u> </u>		C		On	n		On	On	On	On	On	On		
LS-13	On	On	On	On	()r	- m	On	On	On	On	On	Jn		On	On	On	On	On	On		
LS-14	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On	On		
以且 左	+	н н	щ щ	н н	++	н н	н н	++ ++	ні ні	н н	++ ++		+	++	н н	н н	+	н н	щ щ		
ビヨニロ	単循往	単	甲銷往	甲甾位		銷仕	単	甲甾位	単		単道往	1 20/1		単鎖往	甲省住	甲省往	甲銷往	単循位	単道往		
右煞車		領住	領住	鎖住	道住		3項 (工 	3页 ILL 2017年	¥ (近日	道住		道住	鎖住	領住	領住	鎖住	領住	- 新正 		
日本中		鎖住	鎖住	鎖住		鎖住	鎖住	鎖住		- · 正 翁 主		5/T	前生	鎖住		销住	鎖住				
5手煞車	鎖住	鎖住	鎖住	鎖住		鎖住	鎖住	鎖住	鎖住	道行	鎖住	頭目土	順住	鎖住	鎖住	鎖住	鎖住	鎖住	鎖住		
左高度	2222	2222	2222	2222	- 2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222	2222 📻	2222	2222	2222		4
右高度	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	3333	_	
左重量	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4444	4. C	opy Data			
右重量	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5555	5: D	escription	and Tip		
<																	E	mpty Table	5		
																	In	sert Row I	Before		
																	In	sert Colur	nn Before		
																	D	elete Row			
																	D	elete Colu	mn	Export Data To Clipboard	1
																		0.1			

Uninstallation

未來如需移除程式或者更新新版程式,請先至Win7控制台\程式和功能\ 移除RCC程式,不然會無法安裝相同檔名的程式

控制台首頁	解除安裝或變更程式	
檢視安裝的更新 開始或關題 Windows 功能	若要解除安裝程式,請從清單選取程式,然後按一下 [解除安	裝]、[變更] 或 [修復]。
	組合管理 ▼ 解除安裝	
從網路安裝桂式	夕迎 .	
	Microsoft Windows Application Compatibility Database	
	MSXML 4.0 SP2 (KB954430)	1.27 M
	MSXML 4.0 SP2 (KB973688)	1.33 M
	MSXML 4.0 SP3 Parser	1.47 M
	MSXML 4.0 SP3 Parser (KB2758694)	1.54 M
	😿 National Instruments Software	
	🖬 Notepad++ (32-bit x86)	9.60 M
	PDFill PDF Editor with FREE Writer and FREE Tools	22.3 M
	I PL-2303 USB-to-Serial	
	🔁 Python 2.7.9	55.3 M
	💦 Python 3.5.1 Launcher (32-bit)	740 K
	RCC	801 H
	💥 Realtek High Definition Audio Driver	
	Realtek USB 2.0 Card Reader	